

INDEX NO.	DESCRIPTION	PART NO.	REQ'D NO.
1	Valve Cover Screw	226501	1
2	Adjustment Screw	226502	2
*3	Packing	226503	2
*4	Packing	226504	2
5	Spring Guide	226506	2
6	Spring	226507	2
7	Valve	226508	2
8	Cover Screw	226509	2
*9	Copper Washer	226511	2
10	Spring	226512	2
*11	Check Ball	226513	4
12	Nylon Tube	226514	1
13	Elbow Fitting	226516	1
14	Connector	226517	1
15	Bolt	226518	1
16	Packing Guide	226519	1
*17	Packing	226521	1
18	Valve	226522	1
*19	O-ring	226523	1
20	Spring Washer	226524	1
21	Nut	226526	1
*22	O-ring	226527	1
23	Air Box	226528	1
24	Elbow Fitting	226529	1
25	Hose Joint	226531	1
26	Nylon Tube	226532	1
27	Nipple	226533	1
28	Nut	226534	1
29	Muffler Assembly	226555	1
30	Gland Nut	226536	1
31	Bolt	226537	4
32	Lockwasher	226538	4
33	Elbow Fitting	226721	1
34	Hydraulic Pump Piston	226541	1
35	Air Cylinder	226722	1
36	Nut	226723	1
*37	Backup Ring	226724	1
*38	Packing	226546	1
*39	Backup Ring	226547	1
40	Nut	226726	1
*41	O-ring	226549	1
42	Hydraulic Pump Housing	226727	1
*43	Copper Washer	226552	1
44	Oil Strainer	226553	2
45	Hydraulic Block Assembly	226510	1
46	Packing	226554	2
47	Retaining Ring	226556	2
48	Spring Retainer	226557	2
*49	O-ring	226558	2
50	Suction Bolt	226559	2
*51	Oil Seal	226561	1
*52	O-ring	226562	1
53	Cylinder Nut	226563	1
*54	Packing	226564	1
55	By-pass Bolt	226566	1

INDEX NO.	DESCRIPTION	PART NO.	REQ'D NO.
56	By-pass Rod	226567	1
*57	Checkball	226568	1
58	Spring	226569	1
*59	Copper Washer	226571	1
60	Ram	226572	1
61	Ram Bearing	226573	1
*62	Backup Ring	226574	1
*63	Seal	226576	1
*64	Copper Washer	226577	1
65	Release Valve Guide	226578	1
66	Release Valve	226579	1
67	Nut	226581	2
68	Washer	226582	1
69	Spring	226583	1
70	Release Valve Rod	226584	1
71	Pin	226586	1
*72	O-ring	226587	1
*73	Copper Washer	226588	1
74	Rod Guide	226589	1
75	Nut	226591	1
76	Release Valve Connector	226592	1
77	Release Valve Bar	226593	1
78	Cotter Pin	226594	1
79	Connecting Bar Assembly	226515	1
80	Cotter Pin	226596	1
81	Linkage Pin	226597	1
82	Manual Pump Piston	226598	1
*83	Oil Seal	226599	1
*84	Backup Ring	226601	1
*85	Seal	226602	1
*86	O-ring	226603	1
87	Piston Housing	226604	1
*88	Copper Washer	226606	1
89	Screw	226607	1
90	Packing	226608	1
91	Bolt	226609	4
92	Reservoir Cover	226611	1
*93	Gasket	226612	1
94	Bolt	226613	2
95	Lockwasher	226614	2
96	Flatwasher	226616	2
97	Reservoir Housing	226617	1
*98	O-ring	226618	1
*99	O-ring	226619	1
*100	Seal	226621	1
101	Air Piston	226728	1
102	Cupped Washer	226729	1
103	Spring	226731	1
104	Caster Assembly	226520	2
105	Foot Pedal	226626	1
106	Foot Pedal Pin	226627	1
107	Cotter Pin	226628	1
108	Handle Base	226629	1
109	Small Bushing	226631	1
110	Handle Base Screw	226632	1

INDEX NO.	DESCRIPTION	PART NO.	REQ'D NO.
111	Lockwasher	226633	1
112	Large Bushing	226634	1
113	Spring Pin	226636	1
114	Cam Step	226637	1
115	Handle Assembly	226525	1
116	Handle Base Pin	226638	1
117	Retaining Ring	226639	2
118	Lock Bracket Assembly	226530	1
119	Spring	226641	1
120	Cover Plate	226642	1
121	Screw	226643	2
122	Lockwasher	226644	2
123	Flat Washer	226646	2
124	Lockwasher	226647	4
125	Bolt	226648	4
126	Spring Hanger	226649	2
127	Rivet	226651	1
128	Washer	226652	2
129	Nut	226653	2
130	Nut	226654	2
131	Lockwasher	226656	2
132	Retaining Ring	226657	2
133	Wheel	226658	1
134	Wheel Nut	226659	2
135	Chassis Assembly	226535	1
136	Washer	226661	4
137	Bearing Cage	226662	2
138	Set of Roller Bearings	226540	2
139	Zerk Fitting	226663	4
140	Guide Arm	226664	2
141	Guide Arm Bolt	226666	2
142	Cotter Pin	226667	2
143	Elevator Arm Assembly	226545	1
144	Pivot Pin	226668	1
145	Zerk Fitting	226669	2
146	Spring	226671	2
147	Bolt	226672	1
148	Trunion	226673	1
149	Trunion Pivot Bar	226674	1
150	Saddle Base Pivot Bar	226676	1
151	Retaining Ring	226677	2
152	Saddle	226678	1
153	Zerk Fitting	226679	1
154	Saddle Base	226681	1
155	Air Valve Assembly	226550	1
156	Hose Clamp	226682	2
157	Spring	226683	1
158	Air Hose	226684	1

* The asterisk designates those parts included in Repair Kit #226600.